GT-E1225F

Mobile Phone user manual

- Some contents in this manual may differ from your phone depending on the software of the phone or your service provider.
- Visit the Samsung website to view the Samsung Mobile function guide in Adobe Acrobat (.pdf) format. The function guide contains common topics about applications and features that appear in many different models of Samsung mobile phones.

www.samsungmobile.com

Printed in Korea
Code No.:GH68-28678A
English (MEA). 08/2010. Rev. 1.0

SAMSUNG

Safety precautions

To prevent injury to yourself and others or damage to your device, read all of the following information before using your device.

Warning: Prevent electric shock, fire, and explosion

Do not use damaged power cords or plugs, or loose electrical sockets

Do not touch the power cord with wet hands, or disconnect the charger by pulling on the cord

Do not bend or damage the power cord

Do not use your device while charging or touch your device with wet hands

Do not short-circuit the charger or the battery

Do not drop or cause an impact to the charger or the battery

Do not charge the battery with chargers that are not approved by the manufacturer

Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery

For safe disposal of your Li-Ion batteries, contact your nearest authorised service centre.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.
- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.
- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Protect the device, batteries, and chargers from damage

- Avoid exposing your device and batteries to very cold or very hot temperatures.
- Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device and batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Caution: Follow all safety warnings and regulations when using your device in restricted areas

Turn off your device where prohibited

Comply with all regulations that restrict the use of a mobile device in a particular area.

Do not use your device near other electronic devices

Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.

Do not use your device near a pacemaker

- Avoid using your device within a 15 cm range of a pacemaker if possible, as your device can interfere with the pacemaker.
- If you must use your device, keep at least 15 cm away from the pacemaker.
- To minimise the possible interference with a pacemaker, use your device on the opposite side of your body from the pacemaker.

Do not use your device in a hospital or near medical equipment that can be interfered with by radio frequency

If you personally use any medical equipment, contact the manufacturer of the equipment to ensure the safety of your equipment from radio frequency.

If you are using a hearing aid, contact the manufacturer for information about radio interference

Some hearing aids may be interfered with by the radio frequency of your device. Contact the manufacturer to ensure the safety of your hearing aid.

Turn off the device in potentially explosive environments

- Turn off your device in potentially explosive environments instead of removing the battery.
- Always comply with regulations, instructions and signs in potentially explosive environments.
- Do not use your device at refueling points (service stations), near fuels or chemicals, and at blasting areas.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

Turn off your device when in an aircraft

Using your device in an aircraft is illegal. Your device may interfere with the electronic navigation instruments of the aircraft.

Electronic devices in a motor vehicle may malfunction due to the radio frequency of your device

Electronic devices in your car may malfunction due to radio frequency of your device. Contact the manufacturer for more information.

CE 0168

Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle

While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, practice good common sense and remember the following tips:

- Use a hands-free device.
- Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device.
- Position your device within easy reach. Be able to access your wireless device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, let your voice mail answer it for you.
- Let the person you are speaking with know you are driving. Suspend calls in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and heavy traffic can be hazardous.
- Do not take notes or look up phone numbers. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility of driving safely.
- Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call, dial only a few numbers, check the road and your mirrors, then continue.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
- Use your device to call for help. Dial a local emergency number in the case of fire, traffic accident, or medical emergencies.
- Use your device to help others in emergencies. If you see an auto accident, a crime in progress, or a serious emergency where lives are in danger, call a local emergency number.
- Call roadside assistance or a special, non-emergency assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or another special, non-emergency number.

Proper care and use of your mobile device

Keep your device dry

- Humidity and all types of liquids may damage device parts or electronic circuits.
- When wet, remove the battery without turning on your device. Dry your device with a towel and take it to a service centre.
- Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer’s warranty.

Do not use or store your device in dusty, dirty areas

Dust can cause your device to malfunction.

Do not store your device on slopes

If your device falls, it can be damaged.

Do not store your device in hot or cold areas. Use your device at -20° C to 50° C

- Your device can explode if left inside a closed vehicle, as the inside temperature can reach up to 80° C.
- Do not expose your device to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Store the battery at 0° C to 40° C.

Do not store your device with such metal objects as coins, keys and necklaces

- Your device may become deformed or malfunction.
- If the battery terminals are in contact with metal objects, it may cause a fire.

Do not store your device near magnetic fields

- Your device may malfunction or the battery may discharge from exposure to magnetic fields.
- Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields.
- Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers

- The battery may leak.
- Your device may overheat and cause a fire.

Do not drop your device or cause impacts to your device

- The screen of your device may be damaged.
- If bent or deformed, your device may be damaged or parts may malfunction.

Do not use a flash close to the eyes of people or animals

Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purposes.

Use manufacturer-approved batteries, chargers, accessories and supplies

- Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction.
- Samsung cannot be responsible for the user’s safety when using accessories or supplies that are not approved by Samsung.

Do not bite or suck on the device or the battery

- Doing so may damage the device or cause explosion.
- If children use the device, make sure that they use the device properly.

When speaking on the device:

- Hold the device upright, as you would with a traditional phone.
- Speak directly into the mouthpiece.
- Avoid contact with your device’s internal antenna. Touching the antenna may reduce the call quality or cause the device to transmit more radio frequency than necessary.

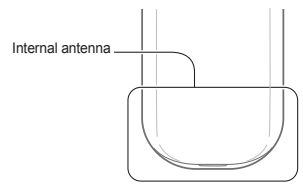

- Hold the device with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

Protect your hearing

- Excessive exposure to loud sounds can cause hearing damage.
- Exposure to loud sounds while driving may distract your attention and cause an accident.
- Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Use caution when using the device while walking or moving

Always be aware of your surroundings to avoid injury to yourself or others.

Do not carry your device in your back pockets or around your waist

You can be injured or damage the device if you fall.

Do not disassemble, modify, or repair your device

- Any changes or modifications to your device can void your manufacturer’s warranty. For service, take your device to a Samsung Service Centre.
- Do not disassemble or puncture the battery, as this can cause explosion or fire.

Do not paint your device

Paint can clog moving parts and prevent proper operation. If you are allergic to the paint or metal parts of the device, stop using the device and consult your physician.

When cleaning your device:

- Wipe your device or charger with a towel or a rubber.
- Clean the terminals of the battery with a cotton ball or a towel.
- Do not use chemicals or detergents.

Do not use the device if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hands and face. Take the device to a Samsung Service Centre to have it repaired.

Do not use the device for anything other than its intended use

Avoid disturbing others when using the device in public

Do not allow children to use your device

Your device is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the device, or make calls that increase your charges.

Install mobile devices and equipment with caution

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Allow only qualified personnel to service your device

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer’s warranty.

Handle SIM cards or memory cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your device conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 W/kg.

During testing, the maximum SAR recorded for this model was 0.599 W/kg. In normal use, the actual SAR is likely to be much lower, as the device has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your device reduces your overall exposure to RF energy.

The Declaration of Conformity of this manual demonstrates your phones compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile phone website.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life.

Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Phone layout

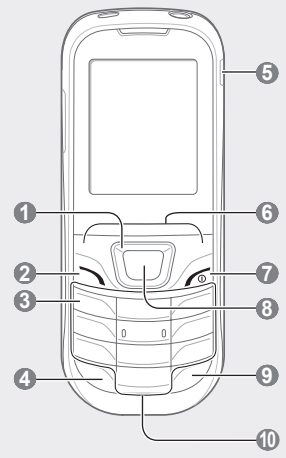

- Use either a 3.5 mm headset or S20 pin headset for listening to the radio. However, the sound quality may be different.
- While listening to the radio with a 3.5 mm headset, do not connect the travel adapter or PC data cable to your phone. The adapter or cable may interrupt the headset's function as a radio antenna.

1 4-way navigation key
Scroll through menu options; In Idle mode, access user-defined menus and make a fake call(press and hold down)
► *Make fake calls*
Depending on your service provider, the default home screen or pre-defined menus may differ

2 Dial key
Make or answer a call; In Idle mode, retrieve recently dialled, missed, or received numbers; With keys locked, Send an SOS message to preset numbers (press 4 times).
► *Activate and send an SOS message*

3 Voice mail service key
In Idle mode, access voice mails (press and hold)

4 Keypad lock key
In Idle mode, lock or unlock the keypad (press and hold)

5 Torch light key
In Idle mode, activate (press and hold) or deactivate the torch light
► *Activate the torch light*

6 Softkeys
Perform actions indicated at the bottom of the display

7 Power/End key
Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

8 Confirm key
In Idle mode, access Menu mode; In Menu mode, select the highlighted menu option or confirm an input

9 SIM Switch key
In Idle mode, access the SIM Switch menu (press and hold)

10 Alphanumeric keys

Your phone displays the following status indicators on the top of the screen:

Icon	Description
	Signal strength
	Call in progress
	Call diverting activated
	Roaming network (outside of normal service area)
	New message
	New voice mail message
	Alarm activated
	Normal profile activated
	Silent profile activated
	SOS message feature activated
	FM radio on
	Battery power level

Install the SIM card and battery

1. Remove the back cover and insert the SIM card.

2. Insert the battery and replace the back cover.

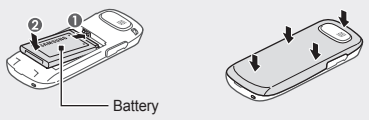

Charge the battery

1. Plug the supplied travel adapter.
2. When charging is finished, unplug the travel adapter.

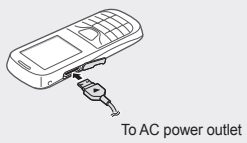

Do not remove the battery while the phone is connected to the travel charger. Otherwise, the phone may be damaged.

Instructional icons

	Warning: situations that could cause injury to yourself or others
	Note: notes, usage tips, or additional information
→	**Followed by**: the order of options or menus you must select to perform a step; for example: In Menu mode, select **Messages** → **Create new message** (represents **Messages**, followed by **Create new message**)
[ ]	**Square brackets**: phone keys; for example: [ ] (represents the Power/End key)
< >	**Angled brackets**: softkeys that control different functions at each screen; for example: <**OK**> (represents the **OK** softkey)

Turn your phone on or off

To turn your phone on,

1. Press and hold [ ].
2. Enter your PIN and press <**OK**> (if necessary).

If you remove the battery, the time and date will be reset.

To turn your phone off, repeat step 1 above.

Access menus

To access your phone's menus,

1. In Idle mode, press <**Menu**> to access Menu mode.

You may need to press the Confirm key to access Menu mode depending on your region or service provider.

2. Use the Navigation key to scroll to a menu or option.
3. Press <**Select**> or the Confirm key to confirm the highlighted option.
4. Press <**Back**> to move up one level; Press [ ] to return to Idle mode.

- When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.
- If the keypad is locked while using the phone, press and hold [*] to unlock.

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [ ] to dial the number.
3. To end the call, press [ ].

The volume through mono headsets is very low or virtually inaudible. Use stereo headsets only.

Answer a call

1. When a call comes in, press [ ].
2. To end the call, press [ ].

Call a recently dialled number

1. In Idle mode, press [ ].
2. Scroll left or right to a call type.
3. Scroll up or down to a number or name.
4. Press the Confirm key to view details of the call or [ ] to dial the number.

Customise your phone

To switch to or from the silent profile

In Menu mode, select **Settings** → **Profiles** → **Silent** to silence or unsilence your phone.

To change your ringtone

1. In Menu mode, select **Settings** → **Profiles**.
2. Scroll to the profile you are using.

If you are using the silent , meeting or offline profile, you are not allowed to change the ringtone.

3. Press <**Options**> → **Edit**.
4. Select **Call ringtone**.
5. Select a ringtone.

To switch to another profile, select it from the list.

To select a wallpaper (Idle mode)

1. In Menu mode, select **Settings** → **Display** → **Wallpaper**.
2. Scroll left or right to an image.
3. Press <**Save**>.

To select a theme (Menu mode)

1. In Menu mode, select **Settings** → **Display** → **My theme**.
2. Select a theme from the list.

To set menu shortcuts

1. In Menu mode, select **Settings** → **Phone** → **Shortcuts**.
2. Select a key to use as a shortcut.
3. Select a menu to assign to the shortcut key.

Adjust the volume

To adjust the volume of the ringtone

1. In Menu mode, select **Settings** → **Profiles**.
2. Scroll to the profile you are using.

If you are using the silent or offline profile, you are not allowed to adjust the volume of the ringtone.

3. Press <**Options**> → **Edit**.
4. Select **Volume** → **Call alert**.
5. Scroll left or right to adjust the volume level.
6. Press <**Save**>.

To adjust the volume of voice during a call

While a call is in progress, press the Navigation key up or down to adjust the volume. If you are using the speakerphone or loudspeaker, you can also adjust the volume of the speakerphone by pressing the Navigation key up or down.

In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Manage your SIM cards

Your phone supports Single Standby Dual SIM mode that enables you to insert two SIM cards into your phone and switch from one to the other whenever necessary. Learn to switch between two SIM cards by using the Menu mode or hot key.

To access the SIM Switch menu through Menu mode,

1. In Menu mode, select **Settings** → **SIM Switch**.
2. Select the other SIM card to use.
   If you select the SIM card you are currently using, your phone will return to the Settings menu.
3. Press <**Yes**> to confirm.
   Your phone will restart to read the SIM card you selected.

To access the SIM Switch menu through the hot key,

1. In Idle mode, press and hold [#].
2. Select the other SIM card to use.
   If you select the SIM card you are currently using, your phone will return to Idle mode.
3. Press <**Yes**> to confirm.
   Your phone will restart to read the SIM card you selected.

Lock your phone

1. In Menu mode, select **Settings** → **Security** → **Phone lock** → **On**.
2. Enter a new 4-digit password and press <**OK**>.
3. Enter the new password again and press <**OK**>.

Lock your SIM card

You can lock your SIM card to allow the phone to use only the SIM card and to prevent other people from using the SIM card.

To allow the phone to use only your SIM card,

1. In Menu mode, select **Settings** → **Security** → **SIM lock** → **On**.
2. Enter a new 4-digit password and press <**OK**>.
3. Enter the new 4-digit password again and press <**OK**>.

To prevent others from using the SIM card,

1. In Menu mode, select **Settings** → **Security** → **PIN lock** → **On**.
2. Enter the 4-digit PIN supplied with the SIM card and press <**OK**>.

Enter text

To change the text input mode

- Press and hold [#] to switch between T9 and ABC modes. Depending on your country, you may be able to access an input mode for your specific language.
- Press [#] to change case or switch to Number mode.
- Press [*] to switch to Symbol mode.
- Press and hold [*] to select an input mode or change the input language.

T9 mode

1. Press appropriate alphanumeric keys to enter an entire word.
2. When the word displays correctly, press [**0**] to insert a space. If the correct word does not display, press the Navigation key up or down to select an alternate word.

ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press an appropriate alphanumeric key to enter a number.

Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

- To move the cursor, press the Navigation key.
- To delete characters one by one, press <**Clear**>. To delete the characters on the left side of the cursor quickly, press and hold <**Clear**>.
- To insert a space between characters, press [**0**].
- To enter special characters, press [**1**].

Add a new contact

The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Phonebook** → **Management** → **Save new contact to**.

1. In Idle mode, enter a phone number and press <**Options**> → **Create contact**.
2. Select a memory location (if necessary).
3. Select a number type (if necessary).
4. Enter contact information.
5. Press the Confirm key to add the contact to memory.

Set favorite numbers

1. In Menu mode, select **Phonebook** → **Favorites**.
2. Select a number (2-9) you want to set.
3. Select a contact to assign to the number.

You can call this contact by pressing and holding the assigned number in Idle mode.

Send and view messages

To send a text message

1. In Menu mode, select **Messages** → **Create new message**.
2. Enter a recipient number and scroll down.
3. Enter your message text. ▶ *Enter text*
4. Press the Confirm key to send the message.

To view text messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text message.

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

To make a fake call

1. In Idle mode, press and hold the Navigation key down.
2. When the keys are locked, press the Navigation key down four times.

Change the delay time before fake calls

1. In Menu mode, select **Settings** → **Application** → **Call** → **Fake call** → **Fake call timer**.
2. Select an option.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

1. In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
2. Scroll left or right to **On**.
3. Scroll down and press the Confirm key to open the recipient list.
4. Press the Confirm key to open your contact list.
5. Select a contact.
6. Select a number (if necessary).
7. When you are finished selecting contacts, press <**Options**> → **Save** to save the recipients.
8. Scroll down and set the number of times to repeat the SOS message.
9. Press <**Save**> → <**Yes**>.

To send an SOS message

1. With the keys locked, press [ ] four times to send an SOS message to preset numbers.
   The phone switches to SOS mode and sends the preset SOS message.
2. To exit SOS mode, press [ ].

Set and use alarms

To set a new alarm

1. In Menu mode, select **Alarms**.
2. Select an empty alarm location.
3. Set alarm details.
4. Press <**Save**>, or press <**Options**> → **Save**.

To stop an alarm

When the alarm sounds,

- Press <**OK**> or the Confirm key to stop the alarm.
- Press <**Snooze**> to silence the alarm for the snooze period.

To deactivate an alarm

1. In Menu mode, select **Alarms**.
2. Select the alarm you want to deactivate.
3. Scroll left or right to **Off**.
4. Press <**Save**>.

If the battery has been removed, the scheduled alarm may not sound.

Listen to the FM radio

1. In Menu mode, select **FM radio**.
2. Press the Confirm key to start the FM radio.
3. Press <**Yes**> to start automatic tuning.
   The radio scans and saves available stations automatically.

The first time you turn on the FM radio, you will be prompted to start automatic tuning.

4. Control the FM radio using the following keys:

Key	Function
Confirm	Turn the FM radio on or off
Navigation	• Left/Right: Tune a radio station; Select an available radio station (press and hold) • Up/Down: Adjust the volume

5. To turn off the FM radio, press the Confirm key.

Continuous exposure to high volume may damage your hearing. Listen to music at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

You may need a compatible headset for better reception of radio signals.

Activate the torch light

The torch light feature helps you see in dark places by making the flash as bright as possible. To activate the torch light, press and hold [ ].

To deactivate the torch light, press [ ].

Do not aim the torchlight directly to someone's eye. It may damage the eye.

Use the mobile prayer feature

The mobile prayer feature alerts you to prayer time using the specified alarm tone. You can set different alarms for each prayer time.

1. In Menu mode, select **Settings** → **Prayer times**.
2. Select a prayer type.
3. Set alarm details.
4. Press the Confirm key.

This feature may not be available depending on your region or service provider.

Use the mobile compass

Find the direction of the Qiblah from anywhere with the mobile compass.

1. In Menu mode, select **Applications** → **Qiblah direction**.
2. Press <**Options**> → **Update**.
3. Point the top of the phone toward the Sun horizontally and press <**Update**>.

This feature may not be available depending on your region or service provider.

SAMSUNG ELECTRONICS

Declaration of Conformity (R&TTE)

We, **Samsung Electronics**

declare under our sole responsibility that the product

GSM Mobile Phone : GT-E1225F

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950- 1 : 2001 +A11:2004
EMC	EN 301 489- 01 V1.8.1 (04-2008)
	EN 301 489- 07 V1.3.1 (11-2005)
SAR	EN 50360 : 2001
	EN 62209-1 : 2006
RADIO	EN 301 511 V9.0.2 (03-2003)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House,
Churchfield Road,
Walton-on-Thames,
Surrey, KT12 2TD, UK*
Identification mark: 0168

CE 0168

The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*

2010.08.04 — Joong-Hoon Choi / Lab Manager
(place and date of issue) — (name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.